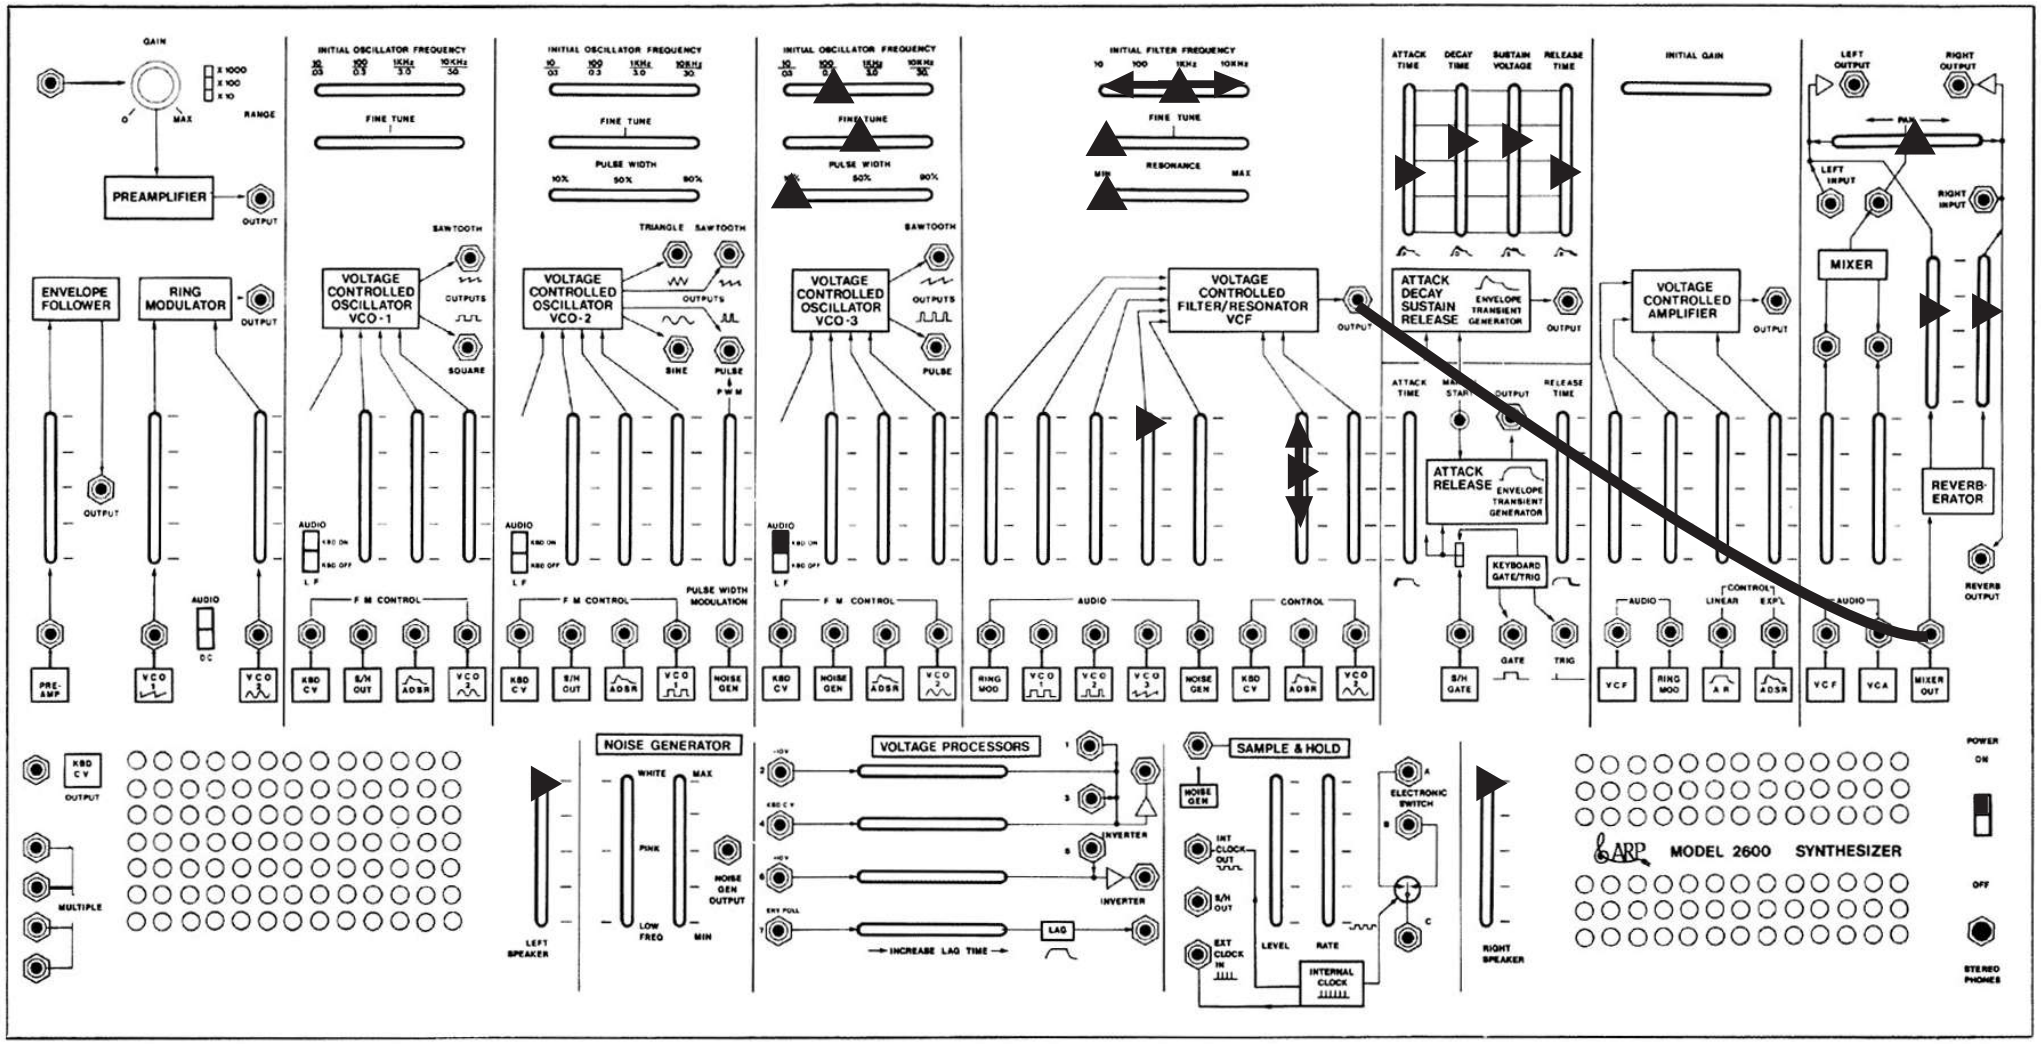

1. Open VCF -> and tune VCO to middle C.
2. Close VCF <- and adjust slider into VCF for trumpet or french horn

Trumpet & French Horn